

# Kylin®

Kylin Electric Multi-function  
Glass Kettle with Tea Infuser 500ml  
AU-K1050



Please read this instruction carefully before using this product.

# Contents

I.Product Performance.....	2
II.Technical Specifications.....	2
III.Parts Identification.....	2
IV.Functions.....	3
V.Safety Precautions.....	4
VI.Cleaning andMaintenance.....	5
VII.Chinese Manual 中文說明.....	7
VIII.12 Month Warranty.....	13

## I. Product Performance

1. Fashionable and simple appearance, exquisite craftsmanship.
2. Microcomputer control with timing adjustment function.
3. High borosilicate glass pot body, with strong stability and better durability.
4. Multigrade heat preservation function, precise temperature control and free adjustment.
5. Equipped with multiple protection devices to ensure product safety.

## II. Technical Specifications


Product Name	Kylin Electric Multi-function Glass Kettle with Tea Infuser 500ml
Product Model	AU-K1050
Power Supply	220V~240V~ 50Hz
Rated Power	600W-714W
Rated Capacity	0.5L
Appearance Dimensions (L × W × H)	155mm×190mm×205mm

## III. Parts Identification

### 1. Main Parts



### 2. Operation Panel:

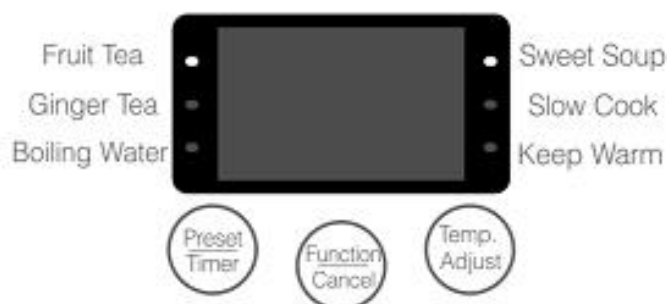

## IV. Functions

### 1. Power-on

Once the appliance is turned on, a “buzz” sound will be heard. The display indicator light will be fully on and then appear “OFF” sign. Press the “Function/Cancel” key at this time to select the function or press the “Timer” key to pre-set the time.

### 2. Function selection

Press the “Function/Cancel” key, and the function will show “Fruit Tea, Ginger Tea, Boiling Water, Sweet Soup, Slow Cook, Keep Warm”. After the corresponding function indicator flashes for 5 seconds, the product will jump to the function key. The indicator will be normally on, and the display will show the “Actual Temperature”.

### 3. Functional operation (e.g., boiling water)

- Press the “Function / Cancel” key and select the “Boiling Water” function. The product will jump to the boiling water function in 5 minutes, the function indicator will be normally on and the display will show the actual temperature.
- The appliance will automatically stop heating when it reaches 100 °C. The heat preservation indicator will be normally on, and the product will show the timing length (e.g., showing “0:30” within 30 minutes). The heat preservation time is non-adjustable. The heat preservation time is 12 hours by default for the boiling water function.
- Press the “Function/Cancel” key to cancel the function.
- Other function operating methods are as follow:

Function	Cooking time (minutes) after the water temperature reaches 100°C		Default maintaining temperature	Reservation time (hour)	Keep Warm time (Hour)
	Default	Adjustable time range			
Fruit Tea	0:18	0:05~1:00	60°C	0.5~24	12:00
Ginger Tea	0:25	0:05~1:00	60°C	0.5~24	6:00
Boiling Water	--		60°C	0.5~24	12:00
Sweet Soup	1:30	0:30~3:00	80°C	0.5~24	2:00
Slow Cook	1:30	0:30~3:00	80°C	0.5~24	2:00
The default temperature is 80°C for heat preservation function. After the appliance reaches the set preset temperature, it will hold such temperature for 24 h. Other parameters are as follows:					
Keep Warm	--		80°C	0.5~24	24:00

Warm tips: Do not add the water above the maximum water level of stew to prevent overspill under the stew functions of “Slow Cook” and “Sweet Soup”.

#### 4. Preset/ Timer function

##### Preset:

Press the "Preset/Timer" key at the standby state. When you press the "Preset/Timer" key once, the pre-set time will increase by 5 minutes (the adjustable time range is 30 minutes to 24 hours). Select the pre-set time and select the corresponding function. Then, the function indicator will flash for 5 s, and display will be on and show the pre-set countdown, and the appliance will jump to the pre-set function.

##### Timer

Press the "Preset/Timer" key at the standby state. After selecting the function of "Fruit Tea, Ginger Tea, Boiling Water, Sweet Soup, Slow Cook", press the "Preset/Timer" key to adjust the function timing length (i.e., the cooking time after the water is boiled). The adjustable time range for "Fruit Tea" and "Ginger Tea", is 5min~60min (the stepping within 10 minutes is 1 minute, and the stepping within 10 minutes is 5 minutes). The adjustable time range for "Sweet Soup" and "Slow Cook" is 0.5h~3h, and the stepping is 5 minutes.

Warm Tips: After selecting the function of "Fruit Tea, Ginger Tea, Boiling Water, Sweet Soup or Slow Cook" under the function, you may need to adjust the timing length.

#### 5. Keep warm and temperature adjustment

Press the "Function/Cancel" key. After selecting the keep warm function, you can press the "Temp. Adjust" key to set the maintaining temperature, and the adjustable temperature range is 40 °C ~ 90 °C.

### V. Safety Precautions

1. Please use the AC power supply consistent with the voltage value indicated on the nameplate.
2. Please use the power supply with the grounding protection to ensure the personal safety.
3. Do not locate this appliance near or on the flammable and explosive substances surface; do not put it in a humid place or positions approaching to other heat sources to avoid potential hazard or risks.
4. This product should be placed on a stable platform and keep away from the children.
5. When the product is operating, the glass pot is extremely hot. Do not touch the glass pot or its spout to avoid scalding.
6. The product will emit steam during operation. Do not approach your face or hand to the steam port to avoid scalding; the objects adversely affected by the steam shall not be placed on the product; do not cover the cloth or similar object on the steam port to avoid accidents or product failure.
7. Please unplug the power cord immediately if the product operates without water and re-operate the product until the appliance cools down. Do not touch the heating plate with hand to prevent scalding.
8. Fill water between the "Minimum water level (MIN)" and "Maximum water level (MAX)". If too much water is filled, the boiled water may be erupted.
9. The power wire must be inserted appropriately.
10. The power plug and socket shall be kept dry. Do not insert and extract the power plug with wet hand to avoid electric shock.
11. Do not move the product while working.
12. The pot shall be used on the base provided.

13. Wash or boils watertwice before the first use and pour out the residual water.
14. Do not use the product when there is no supervision.
15. Ensure that the lid is closed tightly during water boiling to avoid overspill after water boiling.
16. The appliance shall not be used by those who are physically weak, slow in reaction or have mental disturbance (including children), unless they are guided or assisted by the personnel in charge of safety.
17. The children shall be supervised to prevent from playing the appliance.
18. Do not strike the product forcibly to avoid damage and accident.

## VI. Cleaning and Maintenance

1. Before cleaning, the power plug must be extracted from the power socket to cool the product.
2. Both the glass pot and its lid can be cleaned by the detergent and sponge. Do not clean them with the hard steel wire. Otherwise, the surface will be damaged.
3. Do not immerse the power base, the power wire and the whole product in any liquid to prevent water from entering the appliance, which may result in faulty.
4. You may wipe the outer surface of the pot and power base with the wet towel. Do not clean the product with the corrosive liquid.
5. To ensure the normal use of the product, the limescale must be removed periodically from the pot. The limescale shall not be removed by the metal. It is recommended to add water in the pot and then place the (food grade) citric acid or sliced lemon for heating to remove the limescale.
6. Please clean and pack it when it is out of use for a long time. It should be stored in a ventilated and dry place.
7. Product Faulty and troubleshooting

No.	Faulty	Faulty Reason	Troubleshooting Method
①	Indicator failure	The power plug is not inserted appropriately	Check if the power plug is inserted appropriately
		The temperature controller is at the protection state	Switch off the power, and the product will be automatically reset after the product is cooled
②	Water overspill during water boiling	The water is overfilled	Reduce the water as far as possible
		The steam pressure in the pot is excessive after the lid is closed	Open the lid appropriately
③	Power failure before the water is boiled	Remove the dirt thoroughly	Remove the dirt thoroughly

No.	Failure	Reason	Method
④	E1 display	The pot is away from the base or placed incorrectly	Place the pot on the base or place the pot correctly
		Faulty Product	Please send it to the maintenance center for trouble shooting
⑤	E3 display	Sensor short circuit	Please send it to the maintenance center for trouble shooting
⑥	E4 display	The product operates without water in the pot	Switch off the power, cool the heating plate and then the product can normally operate
		Faulty Product	Please send it to the maintenance center for trouble shooting

8. Non-professionals shall not disassemble and repair the product.

9. If the power wire is damaged, it must be replaced by professionals of the manufacturer or the Maintenance Department.

10. When the product malfunctioning which cannot be eliminated, do not repair it by yourself. Please contact our local franchised maintenance outlet or our Customer Service Department.

11. The glass parts in the product are fragile and excluded from warranty. Please use such parts carefully.



Kylin麒麟全自動迷你養生壺500ml  
型號：AU-K1050

## 目錄

一、產品性能特點-----	8
二、主要技術參數-----	8
三、部件名稱介紹-----	8
四、使用方法-----	9
五、注意事項-----	10
六、保養和維護-----	11

使用產品前，請仔細閱讀本說明書



## 一、產品性能特點

- 1.時尚簡約外觀，精緻工藝；
- 2.微電腦控制，帶定時調節功能；
- 3.高硼矽玻璃壺體，穩定性強更耐用；
- 4.多檔保溫功能，精準溫控，隨心調節；
- 5.設有多重保護裝置，確保產品使用安全。

## 二、主要技術參數

產品名稱	Kylin麒麟全自動迷你養生壺500ml
產品型號	AU-K1050
電 源	220V~240V~ 50Hz
額定功率	600W-714W
額定容量	0.5L
外形尺寸 (長×寬×高)	155mm×190mm×205mm

## 三、部件名稱介紹

### 1.主要部件：



### 2.操作面板：



## 四、使用方法

### 1. 接通電源

- 接通電源，蜂鳴1聲，顯示幕指示燈全亮，然後顯示“OFF”，此時可以按“功能/取消”鍵選擇功能，也可按“定時”鍵選擇預約時間。

### 2. 功能選擇

- 按“功能/取消”鍵，功能依次顯示“花果茶” — “參薑茶” — “燒水” — “甜品湯” — “養生湯” — “保溫”，相應的功能指示燈閃爍5秒後進入功能，指示燈長亮，顯示幕顯示“實際溫度”。

### 3. 功能操作（如燒水功能）

- 按“功能/取消”鍵，選擇燒水功能，5秒後進入燒水功能，功能指示燈常亮，顯示幕顯示實際溫度。
- 達到100°C時機器自動停止加熱，保溫燈長亮，顯示計時時間（如30分鐘後顯示“0:30”），保溫時間不可調，燒水功能默認保溫12小時；
- 如需取消功能，則按下“功能/取消”鍵取消功能。

其他功能的操作方式如下

功能	水開100°C後 烹飪時間（分鐘）		默認保溫溫度	預約時間 （小時）	保溫時間 （小時）
	默認	可調定時			
花果茶	0:18	0:05~1:00	60°C	0.5~24	12:00
參薑茶	0:25	0:05~1:00	60°C	0.5~24	6:00
燒水	--		60°C	0.5~24	12:00
甜品湯	1:30	0:30~3:00	80°C	0.5~24	2:00
養生湯	1:30	0:30~3:00	80°C	0.5~24	2:00
保溫功能預設保溫溫度80°C，到達設定溫度後恒溫24h，其它參數如下：					
保溫	--		80°C	0.5~24	24:00

**溫馨提示：在養生湯和甜品湯燉煮功能下，加水不應超過燉煮最高水位線，以防溢出。**

### 4. 預約/定時功能

#### 預約

待機狀態下，按“預約/定時”鍵，每按下“預約/定時”鍵，預約時間以5分鐘遞進（可調節預約時間為30分鐘~24小時），選擇預約時間，並選擇相應的功能後，功能指示燈閃爍5s顯示幕轉顯示預約倒計時，進入預約功能。

## 定時

待機狀態下，按“功能/取消”鍵，選擇花果茶、參薑茶、甜品湯或養生湯功能後，按“預約/定時”鍵，可調節功能定時時間（即水開後烹飪時間），花果茶和參薑茶的調節範圍為5min~60min(10min內的步進為1min，10min後的步進為5min)，甜品湯和養生湯的調節範圍為0.5h~3h,步進5min。

**溫馨提示：預約功能下，選擇功能後，花果茶、參薑茶、甜品湯或養生湯功能可調節定時時間。**

## 5.保溫及溫度調節

- 按“功能/取消”鍵，選擇保溫功能後，可按“溫度調節”鍵，設定保溫溫度，可調溫度為40°C~90°C；

## 五、注意事項

- 1.請使用與銘牌所標電壓值一致的交流電源。
- 2.請使用有保護接地的電源，以確保人身安全。
- 3.不要放在易燃易爆的物品附近或表面使用；不要放在潮濕或靠近其它熱源的地方使用，以免發生故障和危險。
- 4.使用本產品時應放置在兒童接觸不到的穩固平臺上。
- 5.產品工作時，玻璃壺體溫度較高，請勿觸摸玻璃壺體或壺嘴，以免燙傷。
- 6.產品工作時會冒出蒸汽，切勿將臉或手靠近蒸汽口，以防燙傷；怕蒸汽的物體不要置於本產品上方；切勿將抹布或類似物品覆蓋在蒸汽口上，以避免引發意外或導致產品故障。
- 7.若產品出現缺水乾燒，請立即拔掉電源，等待冷卻後再操作，此時切勿用手觸摸發熱盤，以防燙傷。
- 8.加水量應在“最低水位線(MIN)”與“最高水位線(MAX)”之間。如果加水過多，沸水可能噴出。
- 9.插入電源線時，必須插到底，以確保接觸良好。
- 10.應經常保持電源插頭、插座的乾燥，禁止用濕手插拔電源插頭，以防止觸電。
- 11.產品在通電工作時，請勿移動。
- 12.壺體應在提供的底座上使用。
- 13.初次使用時，先清洗或加水沸騰兩次，並把殘餘的水倒掉。
- 14.無人在場時請不要使用該產品。
- 15.煮水時壺蓋一定要確保蓋緊，以免水沸騰後濺出。
- 16.本器具不預備給體能弱、反應遲鈍或有精神障礙的人（包括兒童）使用，除非在對其負有安全責任人員指導或幫助下安全使用。
- 17.兒童應該被監督，以保證他們不玩耍器具。
- 18.本產品不可用力敲擊，以免造成損傷及事故。

## 六、保養和維護

1. 產品清洗前應先拔掉電源線，待冷卻後再進行清洗。
2. 玻璃壺體、壺蓋可用洗潔精和海綿清洗，請勿使用硬質鋼絲清洗，以免損壞表面。
3. 切勿將電源底座、電源線、產品整體浸入任何液體中或沖洗，以免電器進水，產生故障，影響安全使用。
4. 可用濕毛巾擦拭壺體、電源底座的外表面，切勿使用腐蝕性液體對產品進行清洗。
5. 為保證產品能正常使用，壺體內必須定期清除水垢。除垢時不能用金屬物進行洗刷，建議在壺體內加水後放入（食用級）檸檬酸或切片的檸檬加熱除垢。
6. 產品長時間不使用時，請清潔擦淨，裝入包裝箱中，並存放於通風和乾燥的地方，以免產品受潮，影響使用。

### 7. 故障及排除

序號	故障現象	故障原因	排除方法
1	指示燈不亮	插頭未插到位	將電源線插頭重新插入到位
		溫控器進入保護狀態	切斷電源，待產品冷卻後自動重定
		指示燈不良	請送指定維修點
2	水沸騰時，有水溢出	加水太滿	可將水儘量減少
		加蓋後，壺內蒸汽壓力太大	可適當將蓋子拆開
3	水未煮開並斷電	壺內有污垢	將污垢清洗乾淨
4	顯示E1	壺體離開底座或放置不正確	放入壺體或正確放置壺體
		產品故障	請送指定維修點
5	顯示E3	感測器短路	請送指定維修點
6	顯示E4	壺體幹燒	需切斷電源後將玻璃壺裝入冷水降溫後才能正常工作
		產品故障	請送指定維修點

- 8.非專業人員切勿拆卸、修理本產品。
- 9.如電源軟線損壞，為了避免危險，必須由製造商、其維修部或類似部門的專業人員更換。
- 10.當產品出現故障且無法排除時，切勿自行維修，請與我司設立在當地的特約維修網點或本公司客戶服務部聯繫解決。
- 11.本產品中的玻璃件為易碎品，不在保修範圍，請小心使用。

## VII.12 MONTH WARRANTY

In Australia, our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand, our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993.

So, as well as your statutory rights referred to above and any other rights and remedies you may have under any other laws relating to your Kylin product, we also provide you with a Kylin warranty. It's important to note that this warranty is valid only in the country of purchase.

Kylin guarantees this product against defects caused by faulty workmanship and materials for 12 months of domestic use ( or 3 months commercial use) from the date of purchase. During this warranty period, Kylin will repair any defective product. If the product includes a number of accessories, only the defective part or accessory will be replaced. Kylin reserves the right to make minor adjustments instead of replacing the product or accessory. Packaging, instructions, recipes etc will also not be replaced unless faulty.

In the event of a product or accessory being replaced during the warranty period, the warranty on the replacement product will expire 12 months from the purchase date of the original product, not 12 months from the date of the replacement.

To the extent permitted by law, this Kylin 12 months warranty excludes liability for consequential loss or any other loss or damage caused to the property or persons arising from any cause whatsoever. It also excludes defects caused by the product not being used by Instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes breakables such as glass and ceramic items, consumable items and normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice, or you have any questions, ideas, or concerns, please contact us directly on:

Kylin Customer Service Australia +61(0)39998 0999

If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the defective product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this Kylin 12 month warranty, you will need to present this portion of the warranty page and the purchase receipt as proof of purchase so please make sure you keep both this page and your receipt on hand for the duration of the warranty period.

And if for any reason you wish to contact us, please do so at:  
Kylin Customer Service Australia +61(0)39998 0999

HKG PTY LTD

12/11 Mary Street, Blackburn, Victoria, Australia, 3130

[www.kylinaustralia.com.au](http://www.kylinaustralia.com.au)

**Kylin**<sup>®</sup>