

Kylin[®]

Kylin Electric Mini Multi-Function Rice Cooker 2 Cups AU-K6612



12/11 Mary Street, Blackburn, Australia, VIC 3130
www.kylinaustralia.com.au

Kylin[®]

www.kylinaustralia.com.au
Phone Australia 03 9988 3693

Please read the user manual carefully and keep it handy for future reference before using the product.

Contents

I. Safety Precautions-----	2
II. Performance and Characteristics -----	3
III. Key Technical Parameters-----	3
IV. Parts Identification-----	4
V. Instruction of Usage-----	5
VI. Cleaning and Maintenance -----	11
VII. Chinese Manual中文說明 -----	15
VIII.12 Month Warranty-----	29

I. Safety Precautions

- 1.This product is for household and non-commercial use only. Please follow the guidelines in this manual before use.
- 2.This product conforms to the Australian technical certificate for domestic use products and related safety regulations.
- 3.Ensure that the power voltage matches the rated voltage before use.
- 4.Before use, ensure that the power supply is suitable for 220-240V ~ 50-60Hz.
- 5.This product is connected to an AC power supply and requires a fixed three-pin socket with an earth wire. Do not use a movable socket or share a socket with other appliances.
- 6.Please carefully read and follow the following safety precautions before use.
- 7.Do not place the product within reach of children or others to prevent accidents.
- 8.When using this product, place it on a flat surface, away from other heat sources, and do not stack it on top of other appliances.
- 9.Do not touch the casing or hot steam escaping from the glass cover during operation to prevent burns.
- 10.Do not use this product in outdoor areas.
- 11.Extreme caution must be exercised when moving appliances containing hot oil or other hot liquids.
- 12.To ensure safe operation, always connect the plug to the appliance first and then plug the cord into the wall outlet. When disconnecting, turn off any controls and remove the plug from the wall outlet.
- 13.The use of appliances for purposes other than their intended use is prohibited.
- 14.Cooking should only be done using the removable inner pot.
- 15.For optimal performance, place the product on a stable and firm surface, and avoid placing it near other sources of heat.
- 16.Avoid damaging, bending, stretching, or twisting the power cord, and refrain from placing heavy objects on or clamping the power cord.
- 17.The product should not be submerged in water.
- 18.Do not open the upper lid or place your hands or face near the steam vent during operation.
- 19.To prevent burns or impact on the cooking effect, please do not move or shake the rice cooker during operation is prohibited.
- 20.Please avoid placing wet towels on the cover of the rice cooker, as this may cause deformation and discolouration to the cooker's body and cover.
- 21.To prevent accidents or damage to the rice cooker, refrain from cooking foods that may block the vent, such as leafy foods (laver, cabbage), ribbon foods (kelp), or fragmented foods (such as corn fritters).
- 22.Please do not touch the inner pot directly with your hands to prevent scalding from high temperatures during the operation or after completion.
- 23.Please properly align the inner pot with the heating plate by rotating it slightly to the left and right upon placing it inside the rice cooker.

24. Under no circumstances should the inner pot be heated on an open fire.
25. In case of inner pot deformation, please discontinue using the product immediately.
26. Should any malfunction arise, please send the product to a local dealer repair centre for inspection before use. Do not attempt to repair the product yourself to avoid potential danger, and do not dismantle the main pot body on your own.
27. Before placing the inner pot on the heating plate of the rice cooker, please ensure that the bottom of the inner pot is free of any residue.
28. Please do not use an external timer or independent remote-control system to operate the product.
29. Please do not place the product within reach of children or others to prevent accidents.
30. This product is intended for use only as described in the manual book. Please refrain from using it for any other purpose.
31. To ensure optimal performance and safety, it is recommended to wipe each component after cleaning and assemble all parts in their correct positions prior to use.

II. Performance and Characteristics

 
1. Compact and exquisite appearance.
2. Front display, clear and easy-to-use functions.
3. Removable insulation board for convenient cleaning and replacement.
4. Double-layered insulation protection for safer use.
5. The 9-hour reservation function allows cooking at will.
6. Selection of 5 frequently used functions to meet different user needs.

III. Key Technical Parameters

Product Name	Kylin Electric Mini Multi-Function Rice Cooker (2 cups)
Model Number	AU-K6612
Rated Voltage	220-240V~
Rated Frequency	50Hz -60Hz
Rated Power	300W-357W
Capacity	1.2L
Product Dimension	164 mm x 203 mm x 196 mm

IV. Parts Identification

A. Main Parts

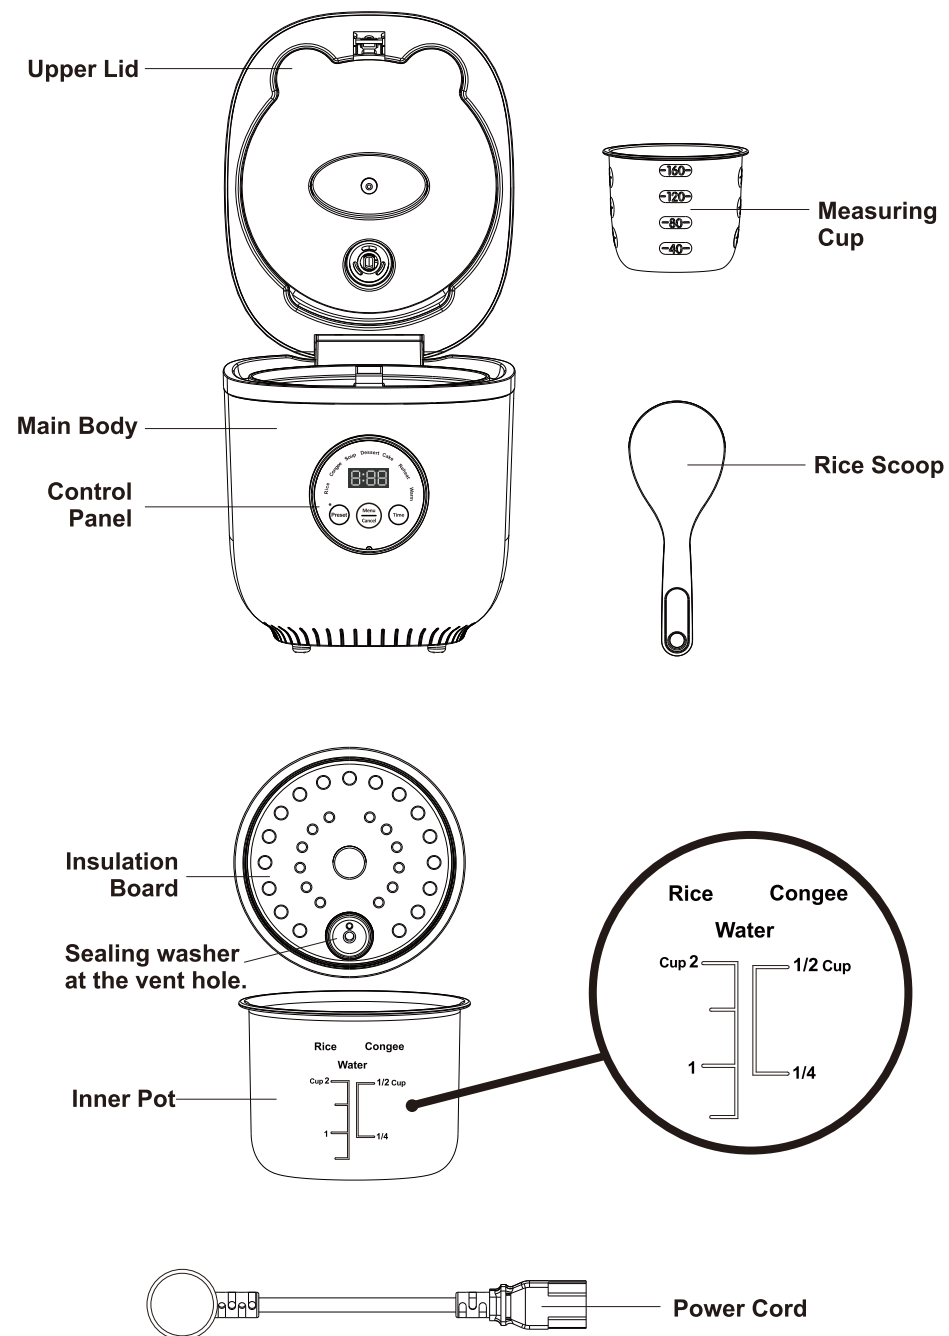

B. Display Panel

 


V. Instruction of Usage

A. General Operation Instruction

1. Standby Mode

The screen displays "OFF", all indicator lights are extinguished, and all functions are not working.

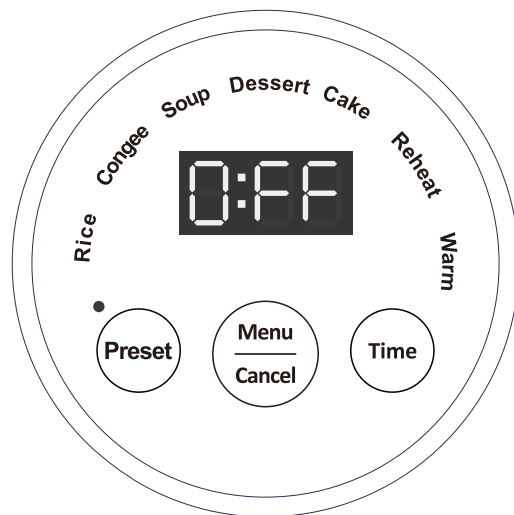

2. Menu / Cancel Button

Press the "Menu/Cancel" button when using the standby mode menu settings. The menu options are selected by rotating clockwise in the following order: Rice, Congee, Soup, Dessert, Cake, Reheat, and Warm.



To adjust the time in the "Menu/Cancel" function, press the "Time" button once to adjust the time by 30 minutes. If you need to cancel the function, press the "Menu/Cancel" button again, and the machine will stop working and return to standby mode.

3. Preset Function

1) After selecting the desired function, press the "Time" button to adjust the working duration of the function. (Each press of the "Time" button adjusts the time to 30 minutes.)

2) After entering the Preset function setting, you can also adjust the preset time by pressing the "Time" button. (Each press of the "Preset" button adjusts the time by 30 minutes. When the accumulated time reaches the maximum value, pressing the "Preset" button again will return to the minimum adjustable time.)

NOTE: The preset time cannot be adjusted for Cake, and Keep Warm functions

3) Menu Function Working Time Setting

Menu Function	Time Setting	Default Operating Time	Maximum Operating Time	Minimum Operating Time	Keep Warm Time	Preset Time
Rice		/(Intelligent Sensor Adjustment)			10:00	Min. Time: 1:00 Max. Time: 9:00
Congee		1:30	4:00	1:00	10:00	
Soup		1:30	4:00	1:00	10:00	
Dessert		1:30	4:00	1:00	10:00	
Reheat		0:30	1:00	0:30	10:00	
Cake		1:00	/	/	10:00	/
Warm		9:59	/	/	10:00	/

* "/" represents the time setting that cannot be adjusted.

* "0:00" represents "Hour:Minutes".


Warm Tips:

- 1)The "Rice" function operating time indicated above may vary slightly depending on the amount of rice, water temperature, rice quality, and the skill of the user.
- 2)When cooking "Congee" or "Soup", the maximum water level should not exceed 70% of the inner pot capacity.
- 3)The reservation time should not be too long to prevent food spoilage or unpleasant odours. Customers should adjust the reservation time based on the ambient temperature and the ingredients being used.


4. Rice Measurement Cup (For Reference)

Menu	Task	Rice Amount	Water Scale Mark in the Inner Pot	Default Working Time
Rice Cooking		1Cup = 160g	Mark 1	Intelligent
		2Cups = 320g	Mark 2	Intelligent
Congee Cooking		1 / 4 Cup = 40g	Mark 1 / 4	1: 30
		1 / 2 Cup = 80g	Mark 1 / 2	1:30

 * "0:00" represents "Hour:Minutes".

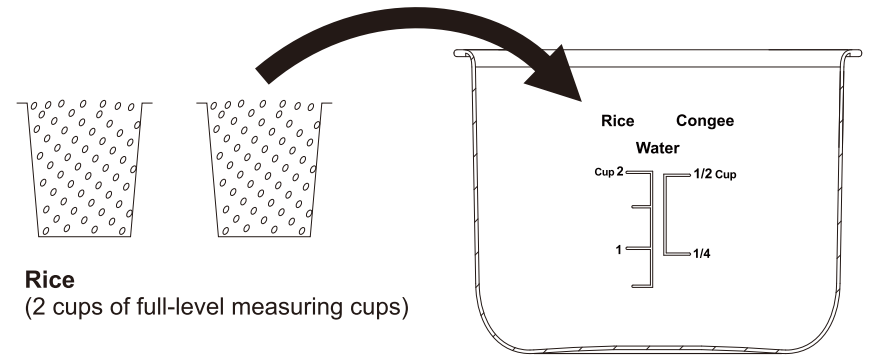

 Rice
(2 cups of full-level measuring cups)

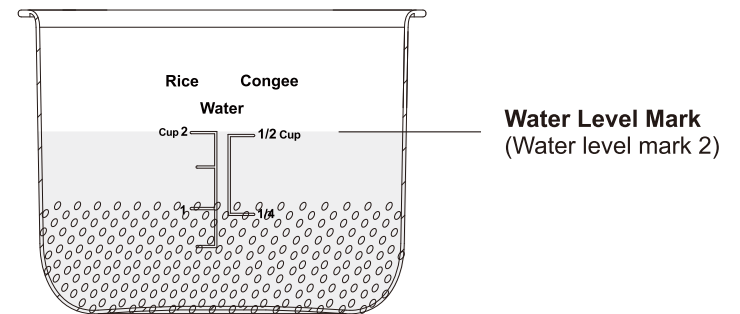

Reference for the quantity of rice and water.

Warm Tips:

To prevent spillage, avoid adding water beyond the maximum scale mark for the corresponding menu.

B. Menu Function Instruction

1. Rice

- 1) Use the measuring cup provided with the product to measure the desired amount of rice.
- 2) After cleaning the inner pot, pour the appropriate amount of water for the rice type and quantity into the pot up to the designated water level line.
- 3) Select the "**Rice**" function, press the button, and wait for 10 seconds for the product to start working automatically. (Since the rice cooking function is an intelligent induction function, the cooking time cannot be set.)
- 4) When the "**Rice**" is cooked, the buzzer will sound "beep", and the product will automatically enter the keep-warm state. (Do not use the rice cooking function for cooking porridge dishes.)

2. Congee

- 1) Use the measuring cup provided with the product to measure the desired amount of rice and pour it into the inner pot.
- 2) After cleaning the inner pot, select the appropriate water level line in the inner pot according to the amount of rice.
- 3) Select the "**Congee**" function (the "**Congee**" function has a default working time of 1 hour and 30 minutes), wait for 10 seconds, and the product will start working automatically.
- 4) When the "**Congee**" is cooked, the buzzer will sound "beep", and the product will automatically enter the keep-warm state. (If keep-warm is not needed, press the "**Menu/Cancel**" button to cancel the keep-warm function.)

3. Soup

- 1) Put the appropriate amount of soup ingredients into the inner pot and cover with the lid. (Do not add ingredients and water to exceed the maximum water level line marked "**Congee**" in the inner pot, as this will cause overflow and may damage the product.)
- 2) Select the "**Soup**" function (the "**Soup**" function has a default working time of 1 hour and 30 mins), wait for 10 seconds, and the product will start working automatically.
- 3) When the "**Soup**" is cooked, the buzzer will sound "beep", and the product will automatically enter the keep-warm state.

4. Dessert

- 1) Put an appropriate amount of dessert ingredients into the inner pot, and cover it with the lid. (Please do not add ingredients and water beyond the maximum water level mark "**Congee**" on the inner pot, which may cause overflow and damage to the product.)

- 2) Select the "**Dessert**" function (the default working time for the "**Dessert**" function is 1 hour and 30 mins) and wait for 10 seconds for the product to start working automatically.

- 3) When the "**Dessert**" is cooked, the buzzer will sound "beep beep" a few times, and the product will automatically enter the keep warm state.

5. Cake

- 1) Put an appropriate amount of cake ingredients into the inner pot, and cover it with the lid.

(When putting ingredients into the inner pot, please try to add less than the amount of 2 eggs.)

- 2) Select the "**Cake**" function (the default working time for the "**Cake**" function is 1 hour, and this function cannot adjust the working time), and wait for 10 seconds for the product to start working automatically.

- 3) When the "**Cake**" is cooked, the buzzer will sound "beep beep" a few times, and the product will automatically enter the keep warm state.

- 4) When using the "**Cake**" function, please do not exceed the Congee's maximum water level of the inner pot with the cake ingredients.)

6. Reheat

 
- 1) When selecting the "**Reheat**" function (the default working time for the "**Reheat**" function is 30 minutes), wait for 10 seconds for the product to start working automatically.

- 2) When the "**Reheat**" function is completed, the buzzer will sound "beep beep" a few times, and the product will automatically enter the keep warm state.

VI. Cleaning and Maintenance

A. Cleaning

1. Prior to cleaning the rice cooker, disconnect the plug and wait for the product to cool down completely.
2. Cleaning the Upper Lid
 - 1) Open the upper lid.
 - 2) Remove the heat preservation plate.
 - 3) Use cleaning water and a soft cleaning sponge to clean the heat preservation plate.
 - 4) After rinsing, use a dry and soft cloth to wipe it.
 - 5) Wipe the sealing ring with a damp cloth after wringing out the water.
 - 6) After completing the cleaning process, reinstall the removable heat preservation plate to the original position. (Refer to below Image 1 for heat preservation plate install.)

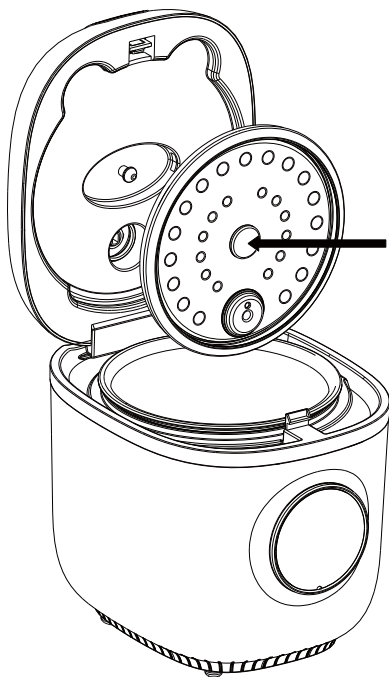

Press the silicone in the middle to install.

Image 1 Install the heating preservation plate

3. Cleaning the Inner Pot

- 1) First, remove the inner pot and clean it with a soft sponge.
- 2) Wipe the inner pot with a dry and soft cloth.

Warm Tips:

Do not wipe and clean the inner pot with steel wire balls, or the non-stick coating may be damaged.

4. Cleaning the Electric Heating Plate

If some rice grains and other debris are attached to the electric heating plate, they can be ground with 320# fine sandpaper and wiped with a dry and soft cloth.

B. Maintenance

1. Before using the product for the first time, please remove all packaging items and clean the inner pot and heat the preservation plate.
2. After cleaning, each component should be wiped and correctly assembled to its original position.
3. When cleaning the pot, use the measuring cup to take a proper amount of rice and add water. Avoid using hard objects that may scratch the non-stick coating.
4. After cleaning, add water to the inner pot according to the water gauge for cooking rice and congee. The ratio of rice and water can be adjusted according to individual tastes.
5. Before placing the inner pot into the rice cooker, wipe any water off the exterior of the pot.
6. Evenly spread the rice at the bottom of the inner pot, then slightly rotate the pot to ensure proper contact with the heating plate.
7. Improper placement of the cover may affect the cooking effect.
8. After wiping with a damp cloth, the outer housing and upper cover should not be wiped with gasoline or other solutions and should not be rinsed or immersed in water or other liquids to prevent damage to the product.

C.Troubleshooting


No.	Failure	Reason	Method
①	Indicator light not on	The electric heating plate is not heating up	The rice cooker is not connected with the the socket of the power supply. The switch and the power supply leads should be inspected for completion, and the plug should be inserted in place.
		The electric heating plate is heating up.	The circuit board is damaged or the connecting wire of the circuit board is disconnected. The product should be sent to the designated Local sales point or Kylin customer service centre for maintenance.
	Indicator light on	Electric heating tube not heating up	1.The main temperature controller fails. 2.Heating element burnt out 3.Partial disconnection of circuit board connection wires. 4.The circuit board is partially disconnected The circuit board is damaged. The product should be sent to the designated Local sales point or Kylin customer service centre for maintenance.
③	Rice is not cooked, or the cooking time is too long.	1.The electric heating plate is deformed. 2.The inner pot is declining, and on the side is hanging. 3.The foreign matters exist between the inner pot and the electric heating plate. 4.The main circuit board is damaged, or the main temperature controller is abnormal. 5.NTC temperature controller is declining.	1.For slight deformation, it can be ground with fine sandpaper; for the re deformation, it should be sent to the Maintenance Department for replacement. 2.The inner pot should be slightly rotated to make it be normal. 3.The foreign matter should be cleaned with steel wire ball. 4.The product should be sent to the designated Local sales point or Kylin customer service centre for maintenance. 5.To restore the NTC temperature controller to its original position, manually press it back to its original horizontal position.

No.	Failure	Reason	Method
④	Burned rice or unable to keep warm automatically or temperature control abnormal	The main circuit board is damaged or the main temperature controller is abnormal	The product should be sent to the designated Local sales point or Kylin customer service centre for maintenance.
⑤	A large amount of porridge overflowing.	The main circuit board is damaged	
⑥	Rice or porridge not boiling for a long time	The main circuit board is damaged	
⑦	Display E1	The bottom sensor is in open circuit	The product should be sent to the designated Local sales point or Kylin customer service Centre for maintenance.
⑧	Display E2	The bottom sensor is in short circuit	
⑨	Display E3	The bottom sensor is under the high temperature protection	

Warm Tips:

If the troubleshooting table cannot be eliminated after the above analysis, please contact the authority sales point or Kylin Customer Service Centre for maintenance and repair.

 D.Storage



If the product is not used for a long time, please clean and wipe it dry, pack it in the box, and store it in a well-ventilated and dry place.

目錄

一、注意事項-----	16
二、產品性能特點-----	17
三、主要技術參數-----	17
四、部件名稱介紹-----	18
五、產品使用說明-----	19
六、保養和維護-----	25

使用產品前，請仔細閱讀本說明書

一、注意事項

- 1.本產品僅供家庭及非商業使用，使用前請遵循本手冊指南。
- 2.本產品符合澳洲家用產品技術檢驗證書及相關安全法規。
- 3.使用前請確保電源電壓符合額定電壓。
- 4.使用前請確保電源適用於220-240V ~ 50-60Hz。
- 5.本產品連接交流電源，需使用帶接地線的固定三插座，不得使用可移動插座或與其他電器共用插座。
- 6.使用前請仔細閱讀並遵守以下安全注意事項。
- 7.請勿將產品放置在兒童或其他人可觸及的地方，以防止意外發生。
- 8.使用時請將產品放在平坦的表面上，遠離其他熱源，不要將其堆疊在其他電器上。
- 9.使用時請勿觸摸外殼或玻璃蓋排出的熱蒸汽，以防止燙傷。
- 10.本產品不適用於室外使用。
- 11.移動含有熱油或其他熱液體的電器時，應極度小心謹慎。
- 12.為確保安全操作，應先將插頭連接至電器，再將電線插入牆壁插座。斷開連接時，應關閉所有控制並將插頭從牆壁插座拔出。
- 13.禁止將電器用於其他用途。
- 14.烹飪時應僅使用可拆卸的內鍋。
- 15.為獲得最佳表現，應將產品放置於穩定堅固的表面上，避免靠近其他熱源。
- 16.避免損壞、彎曲、拉伸或扭曲電源線，並避免在電源線上放置重物或夾緊電源線。
- 17.產品不應浸入水中。
- 18.在操作期間不要打開上蓋，也不要將手或臉靠近蒸氣口。
- 19.為防止燙傷或影響烹飪效果，禁止在操作期間移動或搖晃電鍋。
- 20.請勿將濕毛巾放在電飯煲的蓋子上，否則可能會導致電飯煲本體和蓋子變形和變色。
- 21.為防止事故或損壞電飯煲，請勿烹飪可能堵塞通風口的食物，如葉菜類（紫菜、包菜）、帶狀食品（海帶）或碎裂食品（如玉米餅）。
- 22.為防止高溫燙傷，請勿直接用手觸摸內鍋。
- 23.將內鍋放入電飯煲內時，請稍微向左右旋轉內鍋以使其與加熱板正確對齊。
- 24.絕不可在明火上加熱內鍋。
- 25.若內鍋變形，應立即停止使用本產品。
- 26.若產品發生任何故障，請勿自行修理以避免潛在危險，並請送往當地經銷商維修中心進行檢查後再使用，請勿自行拆卸主鍋體。
- 27.將內鍋放在電飯煲的加熱板上之前，請確保內鍋底部沒有任何殘留物。
- 28.請勿使用外部定時器或獨立遙控系統來操作產品。
- 29.請勿將產品放在兒童或其他人可以觸及的地方，以避免發生意外。
- 30.本產品只適用於手冊中所述之用途，請勿用於其他用途。
- 31.為確保最佳效能和安全，建議在清潔後擦拭每個組件，並在使用前將所有零件按照其正確位置組裝好。

二、產品性能特點


- 1.外觀小巧，精緻美觀。
- 2.前置顯示，功能操作清晰明瞭。
- 3.可拆保溫板，清洗更換方便。
- 4.雙重超保溫保護，使用更安全。
- 5.九小時預約功能，使烹飪隨心所欲。
- 6.三大常用功能選擇，滿足使用者不同需求。

三、主要技術參數


產品名稱	Kylin麒麟迷你多功能電飯煲 (2杯米)
產品型號	AU-K6612
額定電壓	220-240V~
額定頻率	50 Hz -60Hz
額定功率	300W-357W
容量	1.2L
外觀尺寸 (長X寬X高)	164 mm x 203 mm x 196 mm

四、部件名稱介紹

 1.主要零件

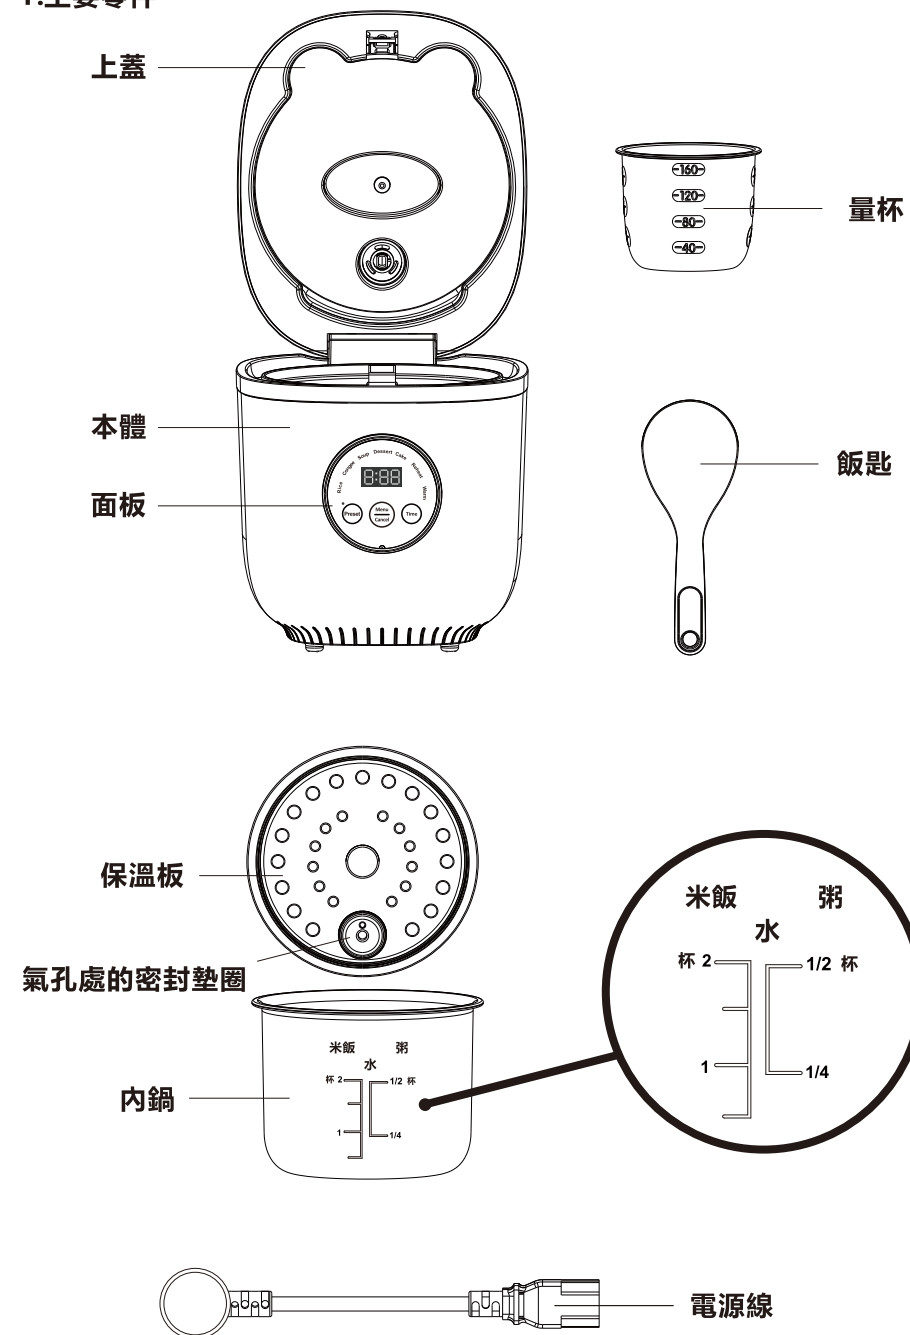

 2.操作面板

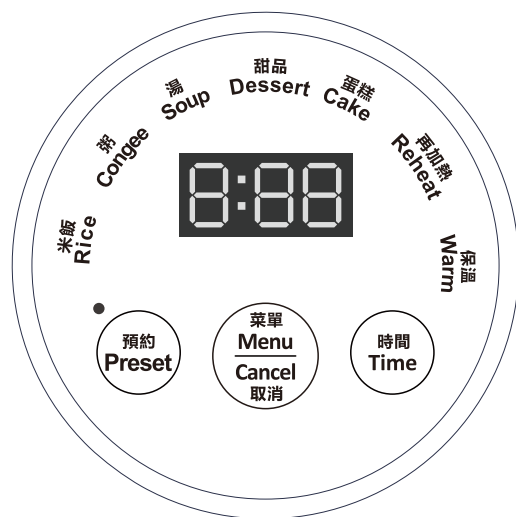


五、產品使用說明

A.產品操作面板介紹

1.待機模式

 螢幕顯示 "OFF"，所有指示燈都熄滅，所有功能都不工作。

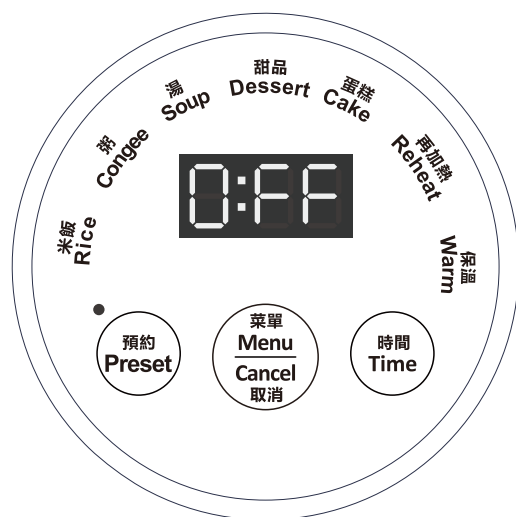

2.選單/取消按鈕

在待機模式下使用時，按下**"菜單/取消"**按鈕。按順時針方向依次選擇以下選單選項：米飯、粥、湯、甜品、蛋糕、再加熱和保溫。

在**"菜單/取消"**功能中，按下**"時間"**鍵一次可以增加30分鐘。



如果需要取消功能，再次按下**"選單/取消"**按鈕，機器將停止工作並返回待機模式。

3.預約功能

- 1)在選擇所需的功能後，按下**"時間"**按鈕來調整該功能的工作時間。（每次按下**"時間"**按鈕可調整30分鐘的時間。）
- 2)進入預約功能設置後，您也可以通過按**"時間"**按鈕來調整預約時間。（每次按下**"預約"**按鈕可調整30分鐘的時間。當累積時間達到最大值時，再次按下**"預約"**按鈕將返回最小可調時間。）

注意：不能調整蛋糕和保溫功能的預約時間。

3) 選單功能工作時間設定

菜單功能	時間設定	預約操作時間	最長工作時間	最短工作時間	保溫時間	預約時間
米飯		/ (智能感應調整)			10:00	
粥		1:30	4:00	1:00	10:00	最短時間設定為1:00
湯		1:30	4:00	1:00	10:00	
甜品		1:30	4:00	1:00	10:00	最長時間設定為9:00
再加熱		0:30	1:00	0:30	10:00	
蛋糕		1:00	/	/	10:00	/
保溫		9:59	/	/	10:00	/

* "/" 代表不能調整時間設置。

* "0:00" 代表 "小時: 分鐘"。



溫馨小貼士:

1. 以上所示的“米飯”烹調時間可能會因米量、水溫、米質和使用者技巧而略有不同。
2. 煮粥或湯時，最大水位不應超過內膽容量的70%。
3. 預約時間不應太長，以防止食物變質或產生不愉快的氣味。顧客應根據環境溫度和所使用的配料調整預約時間。

4) 白米測量杯 (供參考)

菜單功能	項目	白米的總量	內膽水位線	默認烹飪時間
飯		1杯 = 160克	水位刻度 1	智能感應
		2杯 = 320克	水位刻度 2	智能感應
粥		1 / 4 杯 = 40克	水位刻度 1 / 4	1: 30
		1 / 2 杯 = 80克	水位刻度 1 / 2	1: 30

  * "0:00" 代表 "小時: 分鐘"。

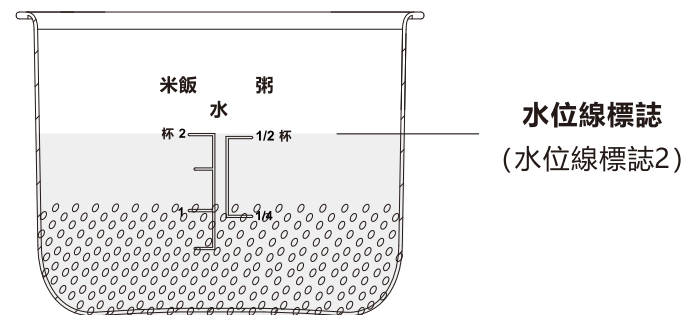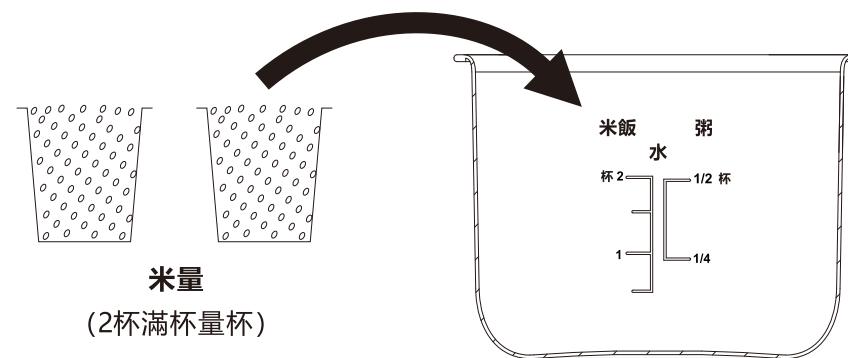

供參考米和水的用量。

溫馨小貼士:

為避免發生溢鍋現象，請勿將水加到對應菜單的最大刻度線以上。

B.菜單功能操作

1.米飯

- 1)請使用本產品量杯量取所需米量。
- 2)清洗後，依照米量與米種倒入適量的水至內膽中適當的水位線。
- 3)選擇**"煮飯"**功能，按下按鈕後，等待10秒，產品即會自動開始運作。(由於煮飯功能為智能感應，故煮飯功能無法設定烹調時間。)
- 4)當**"煮飯"**烹煮完成後，蜂鳴器會發出"滴滴"的聲響，產品會自動進入保溫狀態。(請勿使用**"煮飯"**功能烹煮粥類餐點。)

2.粥

- 1)請使用本產品量杯量取所需米量至內膽中。
- 2)清洗後，依照米量選擇內膽中對應的粥水位線。
- 3)選擇**"粥"**功能（**"粥"**功能預設工作時間為1小時30分鐘），等待10秒，產品即會自動開始運作。
- 4)當**"粥"**烹煮完成後，蜂鳴器會發出"滴滴"的聲響，產品會自動進入保溫狀態。

3.湯

- 1)放入適量的煲湯材料至內膽中，蓋上上蓋。
- 2)(請勿將食材和水量加入超過內膽所標示**"粥"**的最大水位刻度線，這樣會造成溢鍋，並可能造成產品受損。)
- 3)選擇**"湯"**功能（**"湯"**功能預設工作時間為1小時30分鐘），等待10秒，產品即會自動開始運作。
- 4)當**"湯"**烹煮完成後，蜂鳴器會發出"滴滴"的聲響，產品會自動進入保溫狀態。

4.甜品

- 1)放入適量的甜點食材至內膽後，蓋上上蓋。
(請勿將食材和水量加入超過內膽所標示**"粥"**的最大水位刻度線，這會造成溢鍋甚至可能造成產品受損。)
- 2)選擇**"甜品"**功能(**"甜品"**功能預設工作時間為1小時30分鐘)，等待10秒產品開始自動工作。
- 3)當**"甜品"**烹煮完成後蜂鳴器"滴滴"數聲後，自動進入保溫狀態。
(如果不需要保溫，可按下**"菜單/取消"**鍵，即可取消保溫工作。)

5.蛋糕

- 1)放入適量蛋糕食材到內膽後，蓋上上蓋。
(放食材入內膽時，請盡量少加入少於2個雞蛋量的量)
- 2)選擇**"蛋糕"**功能(**"蛋糕"**功能預設工作時間為1小時，此功能無法調節工作時間)，等待10秒產品開始自動工作。
- 3)當**"蛋糕"**烹煮完成後蜂鳴器"滴滴"數聲後，自動進入保溫狀態。
- 4)使用**"蛋糕"**功能時，請確保蛋糕食材不超過內膽**"粥"**的最大水位線。

 
6.再加熱

- 1)當選擇**"再加熱"**功能(**"再加熱"**功能預設工作時間為30分鐘)，等待10秒產品開始自動工作。
- 2)當**"再加熱"**功能完成後蜂鳴器"滴滴"數聲後，自動進入保溫狀態。
(如果不需要保溫，可按下**"菜單/取消"**鍵，即可取消保溫工作。)

六、保養和維護

A. 清潔

1. 在清潔電飯鍋之前，請確保已拔掉插頭，並等待產品完全冷卻。
2. 關於清潔上蓋：
 - 1) 打開上蓋。
 - 2) 取下保溫板。
 - 3) 使用清洗水和軟性清潔海綿清洗保溫板。
 - 4) 清洗後，請用乾燥且軟的布擦拭。
 - 5) 密封環應該在擰幹水後用濕布擦拭。（按照圖1來安裝保溫板）
 - 6) 清洗過程完成後，將可拆卸的保溫板安裝回原位。

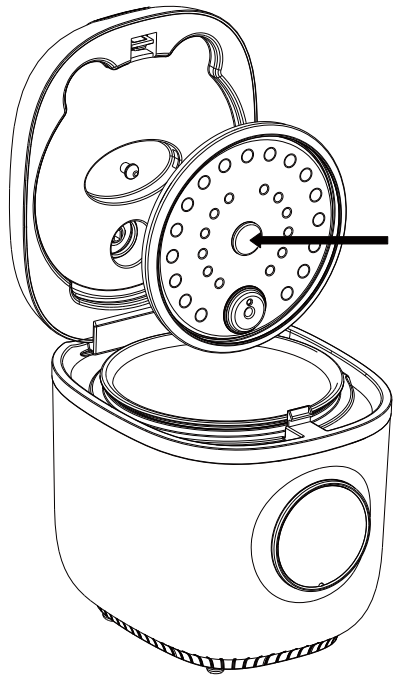

按壓中央矽膠安裝即可

圖1：如何安裝保溫板

3. 關於清潔內鍋：

- 1) 首先取出內鍋，然後用軟海綿進行清洗。
- 2) 內鍋應使用乾燥且軟的布擦拭。
(溫馨提示：內鍋不應使用鋼絲球擦拭和清洗，否則會損壞不粘塗層。)

4. 關於清潔電熱板：

如果電熱板上附有一些米粒和其他雜質，可以使用320#的細砂紙磨磨，然後用乾燥且軟的布擦拭。

B. 維護與保養

1. 請取出產品所有包裝物品，將內鍋和保溫盤拆卸並清洗，以便進行首次使用。
2. 清洗後，應將每個部件擦拭乾淨並正確地組裝回原位。
3. 使用量杯取適量米放入內鍋進行清洗。在清洗過程中，不要用硬物品觸摸內鍋表面，以免刮傷防黏塗層。
4. 清洗後，應根據內鍋的水位刻度注入適量的水進行煮飯和粥。米和水的比例可以根據個人口味進行適當調整。
5. 在將內鍋放入電飯煲之前，請確保擦拭乾淨內鍋外表面上的水分。
6. 米飯應均勻且平鋪在內鍋底部，然後稍微向左右旋轉內鍋，以確保內鍋與加熱板正確接觸。
7. 如果蓋子沒有完全蓋好，將會影響烹飪效果。
8. 外殼和上蓋可用擰乾水的濕布輕輕擦拭。不要用汽油或其他溶液擦拭，也不要用水沖洗產品或浸泡在水或其他液體中，以免損壞產品。

C.常見問題分析

序號	故障現象		故障原因	排除方法
①	指示燈 不亮	發熱盤 不熱	電飯煲與電源插座沒有接 通	檢查開關、電源引線是否 好，並將插頭插到位
		發熱盤 發熱	電路板損壞、電路板連接 線脫開電路板損壞、電路 板連接線脫開	送指定本地經銷商或 KYLIN 客服維修中心
②	指示燈 亮	發熱盤 不熱	1.主溫度控制器發生故障 的元素 2. 加熱元件燒壞 3. 電路板連接線部分斷開	送指定本地經銷商或 KYLIN 客服維修中心
③	飯不熟或烹煮 時間過長		1.電加熱板變形了 2.內鍋下降，邊上掛著。 3.內鍋與發熱盤之間有異 物。 4.主電路板損壞，或主溫 控器不正常。 5.發熱盤傾斜	1.對於輕微變形，可以用 細砂紙打磨；對於再次 變形，應送維修部更換。 2.內鍋應稍作旋轉，使其 正常。 3.異物要用鋼絲球清理。 4.產品應送至當地指定的 銷售點或麒麟客戶服務 中心進行維修。 5.為了讓NTC溫控器回復 到原始位置，請手動把 NTC溫控器(發熱盤)按 回原本水平位置。
④	煮成焦飯或不能 自動保溫或溫控 異常		主電路板損壞或主溫度控 制器出現異常	送指定本地經銷商或 KYLIN 客服維修中心
⑤	煮粥大量溢出		主電路板損壞	送指定本地經銷商或 KYLIN 客服維修中心
⑥	煮飯煮粥長時間不 沸騰		主電路板損壞	送指定本地經銷商或 KYLIN 客服維修中心
⑦	顯示E1		主電路板損壞	送指定本地經銷商或 KYLIN 客服維修中心
⑧	顯示E2		主電路板損壞	送指定本地經銷商或 KYLIN 客服維修中心
⑨	顯示E3		底部的傳感器處於高溫保 護之下。	送指定本地經銷商或 KYLIN 客服維修中心

備註：如果經過上述分析，故障表仍不能排除，請與授權銷售點或麒麟客
服中心聯繫，進行維護與修理。

D.保存方法



如果該產品使用時間不長，請將其清洗乾淨，並裝入箱中。
應存放在乾燥和通風的地方。

VIII. 12 MONTH WARRANTY

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. So, as well as your statutory rights referred to above and any other rights and remedies you may have under any other laws relating to your Kylin product, we also provide you with a Kylin warranty. It's important to note that this warranty is valid only in the country of purchase.

Kylin guarantees this product against defects caused by faulty workmanship and materials for 12 months domestic use (or 3 months commercial use) from the date of purchase. During this warranty period, Kylin will repair any defective product. If the product includes a number of accessories, only the defective part or accessory will be replaced. Kylin reserves the right to make minor adjustments instead of replacing the product or accessory. Packaging, instructions, recipes etc will also not be replaced unless faulty.

In the event of a product or accessory being replaced during the warranty period, the warranty on the replacement product will expire 12 months from the purchase date of the original product, not 12 months from the date of the replacement.

To the extent permitted by law, this Kylin 12 months warranty excludes liability for consequential loss or any other loss or damage caused to property or persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with Instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes breakables such as glass and ceramic items, consumable items and normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice, or you have any questions, ideas, or concerns, please contact us directly on:

Kylin Customer Service Australia +61 (0) 3 9988 3693

If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the defective product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this Kylin 12 month warranty, you will need to present this portion of the warranty page and the purchase receipt as proof of purchase so please make sure you keep both this page and your receipt on hand for the duration of the warranty period.

And if for any reason you wish to contact us, please do so at:
Kylin Customer Service Australia +61 (0) 3 9988 3693