

Kylin®

Kylin Electric Multi-Purpose
Coffee & Spice & Nut Grinder

AU-K6210



www.kylinaustralia.com.au
Phone Australia 03 9988 3693

12/11 Mary Street, Blackburn, Australia, VIC 3130
www.kylinaustralia.com.au

Kylin®

Please read this instruction carefully before using this product.

Contents

I. Safety Precautions-----	2
II. Performance and Characteristics -----	2
III. Key Technical Parameters-----	3
IV. Parts Identification-----	3
V. Instruction of Usage-----	3
VI. Cleaning and Maintenance -----	7
VII. Chinese Manual 中文說明-----	10
VIII.12 Month Warranty-----	19

I. Safety Precautions

- 1.This product should be kept out of reach of children.
- 2.Ensure the appliance is cleaned and stored in a cool, dry place after use.
- 3.Do not immerse the motor base, plug or cord in water or any other liquid.
- 4.Please use the appliance on a dry-level surface.
- 5.Please always switch the appliance to 'OFF', switch the power off at the outlet, and remove the plug when the appliance is not being used and before cleaning.
- 6.To prevent overheating, please do not use the appliance for longer than one minute. After one minute of use, allow the motor to cool for 30 seconds before operating again.
- 7.To clean, wipe the unit body with a wet cloth and clean the steel cup component with a soft brush. Do not submerge the unit body in water or other liquids.
- 8.If the supply cord is damaged, do not operate the appliance. Please contact Kylin for assistance.
- 9.This product is made for domestic use and NOT for commercial use.
- 10.Before using this product, please ensure your power socket is capable of handling 220V-340V.
- 11.Please Ensure the product is unplugged before emptying ingredients or disassembling any parts for cleaning.
- 12.Please Ensure the grinder is cleaned thoroughly to increase its lifespan after every use.
- 13.The appliance is not intended for young children or persons with reduced physical, sensory, or mental capabilities without supervision.
- 14.Please do not leave the appliance unattended when in use. Young children should be supervised to ensure they do not play with the appliance.
- 15.Please fully unwind the power cord before use.
- 16.Please switch off the appliance and disconnect the power supply before removing the bowl or approaching parts that move in use.

 
II. Performance and Characteristics

- 1.A 250W power motor ensures powerful and efficient grinding.
- 2.A contemporary and aesthetically pleasing design with a streamlined appearance.
- 3.The stainless-steel blades and containers are strong and easy to clean.
- 4.The silent motor decreases noise, which is environmentally friendly.
- 5.The push-down operational feature provides ergonomic efficiency and makes this appliance convenient and safe.

III.Key Technical Parameters

Product Name	Kylin Electric Multi-Purpose Coffee & Spice & Nuts Grinder
Product Model	AU-K6210
Power Voltage	220V-240V ~ 50-60Hz
Rated Power	250W
Capacity	75g
Rotation Speed	28000 /minute ~ 38000 / minute
Product Dimension	116mm x 116mm x 208mm
Product Materials	Stainless Steel 304(Food Grade), ABS

IV.Parts Identification

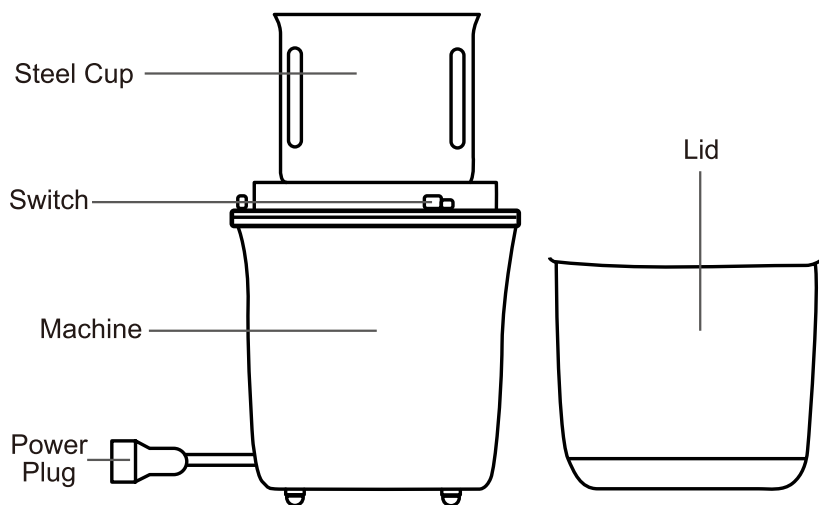


V.Instruction of Usage

Before First Use

Please remove all packaging material or promotional labels before the first use. Wipe the container with a slightly damp cloth and dry well. Care should be taken when cleaning the grinding container, as the blades are sharp.

Step 1.

 Lock the steel cup by turning it clockwise into the machine.

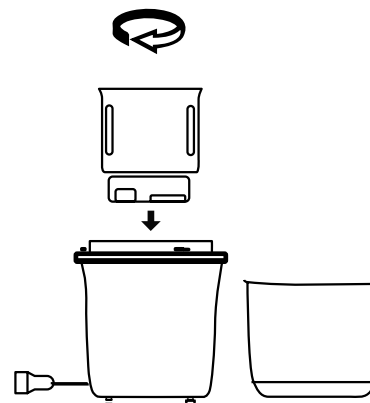


Step 2.

Put ingredients (Up to 75g) into the lid (acts as a measuring cup).




Step 3.

 Pouring ingredients into the steel cup.

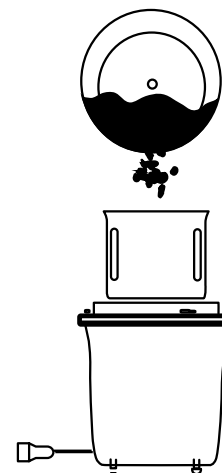


Step 4.

 Cover the machine with the lid and connect it to the power supply.

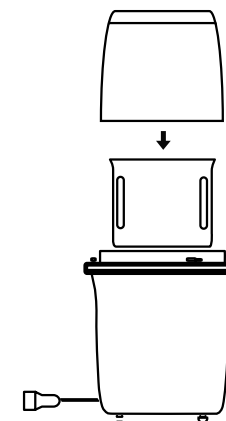

Step 5.

 To activate the motor and begin grinding, use one hand to press down on the lid while the other holds the machine, preventing it from slipping. This will deactivate the safety, and the motor will begin to work.

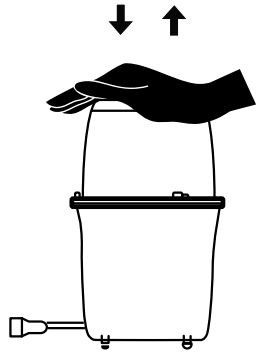

Reminder:

 
The pulse functionality of pressing down on the lid allows the user to grind the ingredients until the preferred consistency is reached. The grinding time is subject to your requirements.

Warm Note:

To prevent the motor from overheating, do not continuously grind ingredients for more than one minute.


Step 6.

Once you have finished Grinding, Lift off the lid.

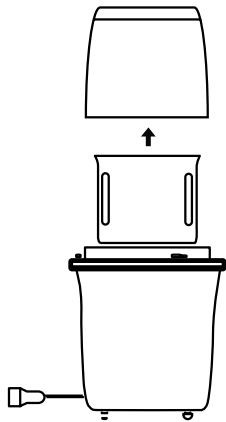


Step 7.

 Rotate the steel cup counterclockwise out of the machine.

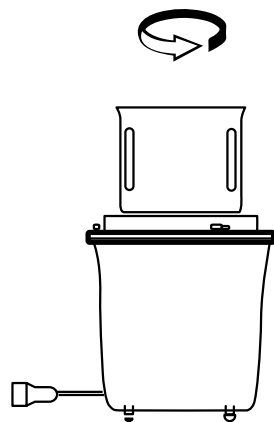


Step 8.

 Pour the ingredients into your preferred container.

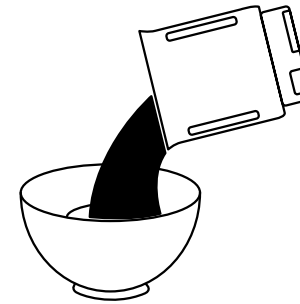

Step 9.

 When the machine is not in use, please cover the machine with a dustproof cap.

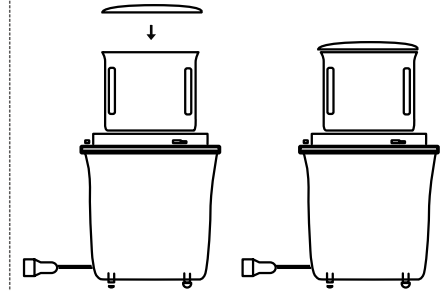



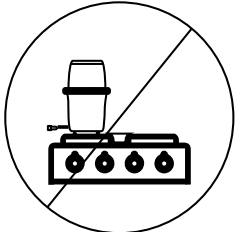
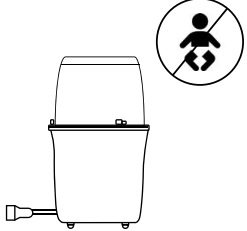
Warm Note:

- A. To ensure optimal grinding performance, allow your grinder to cool for at least one minute between uses.
- B. The grinder will not grind anything that is sticky or extremely hard, i.e., chocolate, whole nutmeg, candied fruits, etc.
- C. The grinder will not make pastes of any fruits, seeds or herbs, Curry paste, nut butter (peanut butter), or tahini (ground sesame paste).
- D. Do not overfill the grinding bowl.

VI. Cleaning and Maintenance

1. Cleaning and maintenance

- 1)The inside of the machine can be cleaned with a soft brush or cloth, and the shell can be wiped with a damp cloth / friendly cleaning agent. Never submerge the appliance under water.
- 2)Do not add any additional lubricant to the blade, as this may have an adverse effect on the component that is already lubricated.

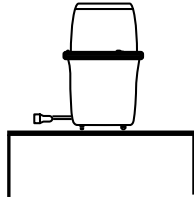	Product must be used on a flat and stable surface
	To avoid the risk of electric shock, this product must be kept away from water.
	Keep the product away from any stoves as the fumes or steam may cause the appliance to break down.
	In order to prevent injury or harm, please keep the product out of reach of children.

2. Troubleshooting

A. If your grinder does not work, please check the following:

- 1)The power is on
- 2)The plug has been correctly inserted into the socket /outlet
- 3)The socket/outlet is switched on.
- 4)There are no ingredients stuck inside the cup or appliance itself.
- 5)The cup component is correctly locked into the body.

B. If your grinder suddenly stops working, please check the following:

- 1)There is a power failure.
- 2)The moto has overheated. Allow the motor to cool down for 30 minutes before operating.

3. Warm Reminder

- 1)Maximum grinding capacity is 75g. Please do not exceed this capacity, as it may cause damage to the blade/motor.
- 2)If the grinder is used for strong aroma ingredients, please clean the appliance thoroughly after use to prevent any odour from forming.
- 3)Operating time: For every one minute of grinding, the appliance must be allowed to cool down for one minute to avoid overheating / damage to the motor.

4. Storage



If the product is used for a short time, please clean it, and put it into a box. It should be stored in a dry and ventilated place.

5. Do not disassemble or repair this product for non-professional personnel.
6. If the above troubleshooting methods are still not working, please contact Kylin for further assistance and do not disassemble or replace the parts yourself. It will affect your right to the 12-month warranty coverage. (Additional charges apply due to the circumstances)
7. After use, must unplug the plug and cool it down before cleaning.
8. If the product fails and cannot be remedied, do not repair it yourself. Don't hesitate to contact our customer service department to solve the problem.

10. Ingredients Operating Time List

Ingredients		Maximum grinding weight per press	Grinding time
Harder Ingredients	Soybeans	80g	30 seconds
	Mung Bean	80g	30 seconds
	Rice	80g	30 seconds
	Pepper	60g	30 seconds
	Sesame	60g	15 seconds
Softer Ingredients	Coffee Bean	75g	30 seconds
	Star Anise	40g	30 seconds
	Dried Chillies	20g	15 seconds

*The above grinding times are for the fineness shown in the general recipe, and you can increase or decrease the grinding time as required.

Warm Note:

- A. For oil-rich legumes such as peanuts, walnuts, almonds, soybeans, etc., as they are rich in oil, they tend to stick to the blade and the wall of the cup when grinding and will not fall off easily, resulting in poor grinding results.
- B. To ensure the product's life, do not grind beans rich in oil for too long, as the grindings may stick to the blade assembly and cause the motor to idle.
- C. Clean with a clean brush or towel immediately after grinding strongly flavoured foods and spices such as chillies, peppers etc., to avoid any taste contamination.
- D. Please do not put ingredients over the cup's MAX (maximum line).

目錄

一、注意事項	11
二、產品性能特點	11
三、主要技術參數	12
四、部件名稱介紹	12
五、產品使用說明	13
六、保養和維護	15

使用產品前，請仔細閱讀本說明書

一、注意事項

- 1.本產品應放在兒童接觸不到的地方。
- 2.確保設備在使用後被清潔並儲存在陰涼乾燥的地方。
- 3.不要將電機底座、插頭或電線浸泡在水中或任何其他液體中。
- 4.請在乾燥的平面上使用該設備。
- 5.在不使用設備時和清潔前，請務必將設備切換到 "關閉" 狀態，關閉插座的電源，並拔掉插頭。
- 6.為防止過熱，請不要使用設備超過一分鐘。使用一分鐘後，讓電機冷卻30秒後再操作。
- 7.清潔時，用濕布擦拭機身，用軟毛刷清潔鋼杯部件。不要將機身浸泡在水或其他液體中。
- 8.如果電源線損壞，請不要操作設備。請聯繫麒麟公司尋求幫助。
- 9.本產品為家庭使用，不用於商業用途。
- 10.在使用本產品之前，請確保您的電源插座能夠處理220V-340V。
- 11.在清空食材或拆卸任何部件進行清潔之前，請確保拔掉產品的插頭。
- 12.請確保在每次使用後徹底清潔磨床以增加其使用壽命。
- 13.本設備不適用於體弱者，感官或精神能力下降者在沒有監護人的情況下使用。
- 14.在使用時，請不要讓設備無人看管。應監督幼兒，確保他們不玩弄該設備。
- 15.使用前，請將電源線完全展開。
- 16.在拆卸碗或接近使用中移動的部件之前，請關閉設備並切斷電源。


二、產品性能特點

- 1.250W功率的馬達確保了強大和高效的研磨。
- 2.流線型的外觀設計，具有現代感和美感。
- 3.不銹鋼刀片和容器堅固且易於清洗。
- 4.靜音馬達減少了噪音，這是很環保的。
- 5.下推式操作功能提供了符合人體工程學的效率，並使該設備方便和安全。

三、主要技術參數

產品名稱	Kylin 麒麟電動多功能咖啡香料堅果磨粉機
產品型號	AU-K6210
額定電壓	220V-240V ~ 50-60Hz
額定功率	250W
容量	75克
轉速	28000 /分 ~ 38000 /分
產品尺寸	116毫米 x 116毫米 x 208毫米
產品材料	不銹鋼304 (食品級), ABS

 四、部件名稱介紹

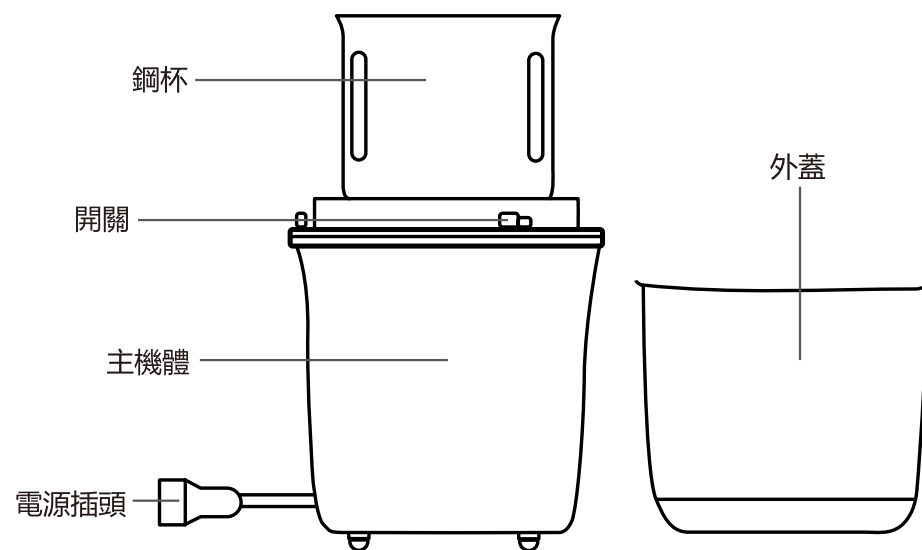


五、產品使用說明

初次使用前:

在第一次使用前，請去除所有的包裝材料或宣傳標籤。用微濕的布擦拭容器，並充分乾燥。清潔研磨容器時應注意，因為刀片很鋒利。

步驟1.

 將鋼杯順時針旋轉到機器中，將其鎖定。

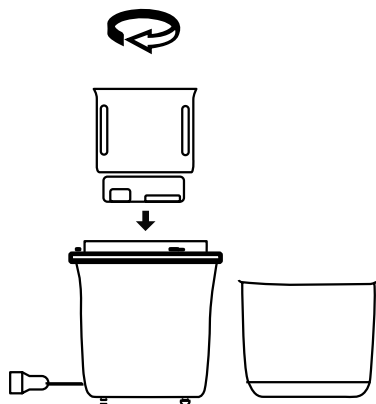


步驟2.

將原料 (最多75克) 放入蓋子(作為量杯)。




步驟3.

 將原料倒入鋼杯。

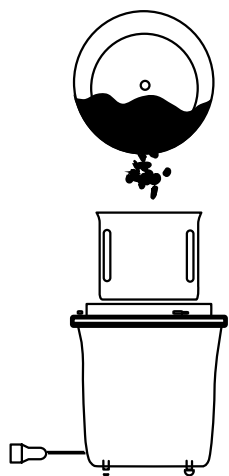


步驟4.

 用蓋子蓋住機器，並將其與電源連接。

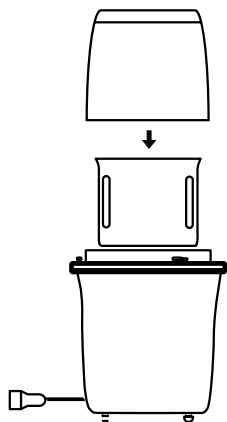

步驟5.

 為了啟動馬達並開始研磨，用一隻手壓住蓋子，另一隻手握住機器，防止它滑落。這將解除安全裝置，馬達將開始工作。

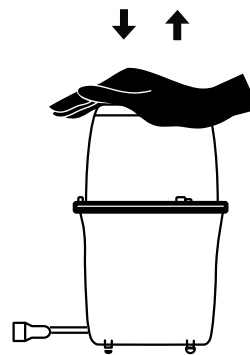

小提醒:


按壓蓋子的研磨功能的脈衝功能，使用戶能夠磨碎原料，按壓直至達到理想的細度。研磨時間根據您的要求而定。

溫馨提示:

為防止電機過熱，不要連續研磨食材超過一分鐘。


步驟6.

 一旦你完成了研磨完成，可打開蓋子。

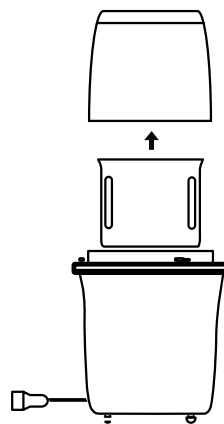


步驟7.

 將鋼杯逆時針旋轉拿起可分離主機體。

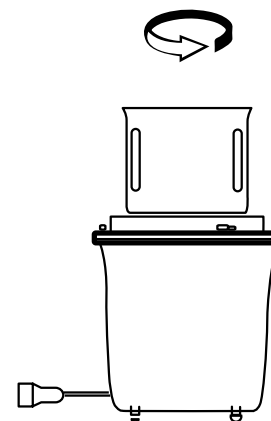


步驟8.

 將原料倒入你的容器中。

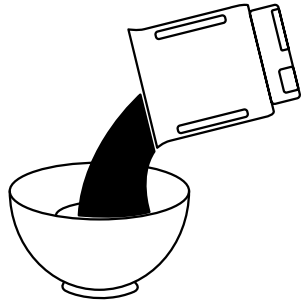

步驟9.

 當機器不使用時，請用防塵帽蓋住機器。

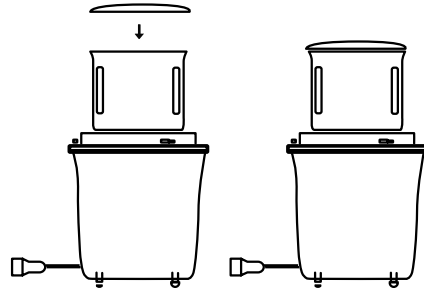

溫馨提示：

- 1)為了確保最佳的研磨性能，在兩次使用之間，請讓您的研磨機冷卻至少1分鐘。
- 2)碾磨機不能碾磨粘性或極硬的東西，如巧克力、整個肉荳蔻、蜜餞等。
- 3)碾磨機不能製作任何水果、種子或草藥的糊狀物、咖哩醬、堅果醬（花生醬）或塔希尼（磨碎的芝麻醬）。
- 4)不要把研磨碗裝得過滿。

六、保養和維護

1.清潔和維護

- 1)機器內部可以用軟刷或布清潔，外殼可以用濕布/友好型清潔劑擦拭。切勿將設備浸沒在水中。
- 2)不要在刀片上添加任何額外的潤滑劑，因為這可能對已經潤滑的部件產生不利影響。

	<p>產品必須在一個平坦和穩定的表面上使用。</p>
	<p>為避免點擊的危險，本產品必須遠離水。</p>
	<p>請將本產品遠離任何爐灶，因為煙氣或蒸汽可能導致設備損壞。</p>
	<p>為了防止受傷或傷害，請將本產品放在兒童接觸不到的地方。</p>

2.故障排除

A.如果你的磨床不工作，請檢查以下情況。

- 1)電源已接通
- 2)插頭已正確插入插座/出線口
- 3)插座/插座已打開。
- 4)杯子或設備本身沒有卡住原料。
- 5)杯子的部件已經正確地鎖定在機身上。

B.如果你的磨床突然停止工作，請檢查以下情況。

- 1)有一個電源故障。
- 2)電機已經過熱，讓電機冷卻30分鐘後再操作。

3.溫馨提醒

- 1)最大研磨量為75克。請不要超過此容量，否則可能導致刀片/電機損壞。
- 2)如果研磨機用於處理濃香型原料，請在使用後徹底清潔設備，以防止形成任何異味。
- 3)操作時間:每研磨一分鐘，必須讓設備冷卻一分鐘，以避免過熱/損壞電機。

4.儲存



如果該產品使用時間不長，請將其清洗乾淨，並裝入箱中。
應存放在乾燥和通風的地方。

- 5.不要讓非專業人員拆卸或修理本產品。
- 6.如果上述故障排除方法仍然無效，請與麒麟 Kylin公司聯繫，以獲得進一步的幫助，不要自行拆解或更換零件。這將影響你的12個月保修期的權利（可能會根據情況收取額外費用）。
- 7.使用後，必須拔掉插頭，冷卻後再清洗。
- 8.如果產品出現故障且無法補救，請不要自行維修。不要猶豫，請聯繫我們的客服部門來解決問題。

10.食材研磨時間參考表(僅供參考)

	食材	每次研磨最大重量	研磨時間
硬質食材	黃豆	75克	30秒
	綠豆	75克	30秒
	大米	75克	30秒
	胡椒	60克	30秒
	芝麻	60克	15秒
軟質食材	咖啡豆	75克	30秒
	五角	40克	30秒
	乾辣椒	20克	15秒

*上述研磨時間是針對一般配方中顯示的細度，您可以根據需要增加或減少研磨時間。

溫馨提示:

- 1)對於富含油脂的豆類，如花生、核桃、杏仁、大豆等，由於富含油脂，研磨時容易粘在刀片和杯壁上，不容易脫落，導致研磨效果不佳。
- 2)為了保證產品的使用壽命，不要長時間研磨富含油脂的豆子，因為研磨物可能會粘在刀片組件上，導致機器空轉。
- 3)在研磨味道強烈的食物和香料後如辣椒、胡椒等後，請立即用乾淨的刷子或毛巾清潔，以避免任何味道的污染。
- 4)請不要把原料放在杯子的MAX(最大線)以上。

VIII. 12 MONTH WARRANTY

In Australia our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

In New Zealand our goods come with guarantees that cannot be excluded under the Consumer Guarantees Act 1993. So, as well as your statutory rights referred to above and any other rights and remedies you may have under any other laws relating to your Kylin product, we also provide you with a Kylin warranty. It's important to note that this warranty is valid only in the country of purchase.

Kylin guarantees this product against defects caused by faulty workmanship and materials for 12 months domestic use (or 3 months commercial use) from the date of purchase. During this warranty period, Kylin will repair any defective product. If the product includes a number of accessories, only the defective part or accessory will be replaced. Kylin reserves the right to make minor adjustments instead of replacing the product or accessory. Packaging, instructions, recipes etc will also not be replaced unless faulty.

In the event of a product or accessory being replaced during the warranty period, the warranty on the replacement product will expire 12 months from the purchase date of the original product, not 12 months from the date of the replacement.

To the extent permitted by law, this Kylin 12 months warranty excludes liability for consequential loss or any other loss or damage caused to property or persons arising from any cause whatsoever. It also excludes defects caused by the product not being used in accordance with Instructions, accidental damage, misuse, or being tampered with by unauthorised persons, excludes breakables such as glass and ceramic items, consumable items and normal wear and tear and does not cover the cost of claiming under the warranty or transporting the goods to and from the place of purchase.

Should you suspect your product may be defective and need some clarification or advice, or you have any questions, ideas, or concerns, please contact us directly on:

Kylin Customer Service Australia +61 (0) 3 9988 3693

If you're certain your product is defective, and the product is covered by the terms of this warranty, you need to take the defective product back to the place you purchased it from, where the retailer will replace the product for you on our behalf. In this event, per the terms of this Kylin 12 month warranty, you will need to present this portion of the warranty page and the purchase receipt as proof of purchase so please make sure you keep both this page and your receipt on hand for the duration of the warranty period.

And if for any reason you wish to contact us, please do so at:

Kylin Customer Service Australia +61 (0) 3 9988 3693